

**COLORFLY**

**TABLET i784 D1**



**User Manual**



COLORFLY YOUR LIFE / [WWW.COLORFUL.CN](http://WWW.COLORFUL.CN)

# Foreword

Thank you for purchasing our products. This user manual provides details including product information and product usage, helping you understand and operate the product. Read all materials provided with the product before using it.

**NOTE:** Please always back up data to your PC. In no event shall our company be liable for any personal data loss or damage arising directly or indirectly from the use of this product. Our company shall not be liable for any accidental loss caused by misunderstanding of this manual and not be liable for third party claims arising out of the use of this product.

Some functions described in this manual may be different from the actual functions of the product since our company is committed to continuously optimizing product functions and improving user experience. All content in this manual is subject to change without prior notice.

**For more information, visit our official website.**

**Official website:** <http://www.colorful.cn>

## **Contents**

1 Overview .....	1
Appearance Description.....	1
2 Getting Started.....	2
Turning Tablet On/Off .....	2
Turning Screen Off.....	2
Forcibly Turning the Tablet Off .....	2
Charging and Battery .....	2
Storage Card (TF Card) Usage .....	4
Input Method Setting.....	4
Connecting to Networks .....	4
Connecting to USB Devices .....	5
Connecting to a PC.....	5
3 Main Screen.....	5
Icons on the Main Screen .....	5
APPS and WIDGETS Pages .....	6
Desktop Shortcut Creation.....	6
Wallpaper Changing.....	6
4 Settings.....	7
Wireless & Networks.....	7
Sound .....	9
Display .....	9
Storage .....	9
Battery .....	9
Apps .....	9
Users.....	9
Location access .....	10
Security .....	10

---

Language & input .....	11
Backup & reset.....	11
Accounts .....	11
Date & time .....	11
Accessibility .....	12
Developer options.....	12
About tablet .....	12
5 Software Installation and Uninstallation .....	13
Installation.....	13
Uninstallation .....	13
6 Common Applications .....	13
Music Player .....	13
Video Player.....	14
Camera.....	14
Gallery .....	14
File Manager .....	15
Email .....	15
Browser.....	15
GPS Application.....	16
7 FAQ.....	16
8 Safety and Cleaning .....	17
Tablet Carrying.....	17
Reducing Electric Shock or Tablet Damage Risks .....	18
Properly Using the Data Cable and Power Adapter.....	18
Keeping the Tablet Exterior Clean.....	19
Keeping the Tablet in a Safe Temperature Range.....	19
Storing the Tablet .....	19
Preventing Hearing Loss.....	19
Warning About High-Risk Activities.....	20

 
# 1 Overview

## Appearance Description

Front camera



Rear camera

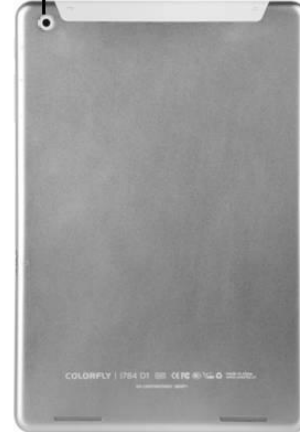

## 2 Getting Started

### Turning Tablet On/Off

#### Turn tablet on

Hold down the Power button until the product logo appears.

#### Turn tablet off

Hold down the Power button until the confirmation dialog box appears, and tap Power off.

If the tablet is in sleep mode, wake up the tablet first, and then hold down the Power button.

### Turning Screen Off

Press the Power button for one second, and the screen is turned off. To turn the screen on, press the Power button again.

Turning the screen off can reduce power consumption.

**Tips:** You can go to Settings > Display to set the auto-lock interval.

### Forcibly Turning the Tablet Off

When the tablet cannot be turned on or does not respond, forcibly turn the tablet off by holding down the Power button. Then, turn on the tablet again.

### Charging and Battery

#### Charge the tablet

The methods for charging the tablet are as follows:

- Use the included USB cable to connect to a PC for charging.
- Use the included USB cable to connect to a power adapter and plug the power adapter to a power outlet for charging.

**NOTE:** It takes longer time to charge the tablet by connecting it to a PC. Charging the tablet by power adapter is recommended. If no power adapter is delivered with the tablet, use a power adapter of 5V/2 A.

### **Tips for using the battery**

- If you charge the battery for the first time, charge it for more than eight hours, to maximize the battery life.
- If the tablet has not been used for a long time or the battery power is used up, the tablet may fail to be turned on when you start to charge it. This is the normal case. Turn on the tablet after the battery is charged for more than 10 minutes.
- Using data services consumes more power and reduces the tablet standby time.
- The battery charging duration varies according to temperature and battery use status.
- When the battery power is insufficient, a notification message is displayed. The tablet automatically shuts down when the power is too low.

### **Tips for reducing power consumption**

- Turn the screen or tablet off when you do not use the tablet.
- Set a short screen auto-lock interval.
- Reduce the screen brightness.
- Turn the volume down.
- Disable the Bluetooth function if it is not required.
- Close the WLAN connection when it is not required.
- Disable data services when they are not required.

## Storage Card (TF Card) Usage

### Insert a storage card

Insert a storage card into the TF card slot as prompted.

### Browse files on the storage card

- Start the File Manager application and select the storage card.
- Start an installed third-party file manager program and select the storage card.

### Remove the storage card


To prevent data loss or damage, unmount the storage card before removing it.

Go to Settings > Storage > Unmount SD card, push the storage card towards the slot, release the storage card, and take it out.

**Tips:** You are advised not to perform hot-plug or hot-pull on a storage card when it is used, to prevent data loss or damage.

## Input Method Setting

You can download and install your favorite input methods. After an input method is installed, you can select it.

Go to Settings > Language & input, select an installed input method, and tap . The system switches to the installed input method.

## Connecting to Networks

The tablet can use the Wi-Fi function and an external 3G dongle to connect to a network. For details about how to set a network, see "Wireless & Networks" in this manual.

## Connecting to USB Devices

The tablet supports OTG extension. Users can easily connect the tablet to USB devices such as mouse and keyboard by using the OTG cable.










## Connecting to a PC

Use the included USB cable to connect the tablet to a PC.

If you connect the tablet to your PC for the first time, the PC operating system prompts you to install a driver. After the driver is successfully installed, a device option window is displayed each time when you connect the tablet to the PC. You can choose an option based on your requirements.


## 3 Main Screen

### Icons on the Main Screen

Icon	Name	Description
	Return	Tap this icon to go to the previous viewed page.
	Home page	Tap this icon on any page to go to the Home page.
	Recently used	Tap this icon to view the recently used applications.
	Search button	Tap this icon to search.
	All applications	Tap this icon to view all applications.
 	Volume -/Volume +	Tap these icons to adjust the volume.
	Screenshot	Tap this icon to capture the screen.
	Status display	This area displays information including time, network, and battery power information, and you can tap to view details.

## APPS and WIDGETS Pages

### Display the APPS page

Tap , and the APPS/WIDGETS page appears, displaying icons of all installed applications. You can swipe left or right to view more applications.

### Display the WIDGETS page

On the APP page, tap WIDGETS in  in the upper left corner or swipe left.

## Desktop Shortcut Creation

### Create an application shortcut icon on the desktop

On the APPS or WIDGETS page, touch and hold an icon until the desktop appears, and you can drag the icon to any position on the desktop.

### Delete an application shortcut icon from the desktop

1. Touch and hold an icon on the desktop until a cross icon appears.
2. Drag the icon to the cross icon. After the icon turns red, release the icon.

## Wallpaper Changing

1. Touch and hold on blank area on the main screen. The Wallpapers, Live Wallpapers, and Gallery options are displayed. Tap an option to display the picture selection page.
2. Alternatively, go to Settings > Display and tap Wallpaper.

## 4 Settings

### Wireless & Networks

#### Wi-Fi


##### Turn on the Wi-Fi network

1. Go to Settings > WIRELESS & NETWORKS and tap ON/OFF on the right to disable or enable the Wi-Fi service.
2. Tap Scan when the Wi-Fi service is enabled to view the detected Wi-Fi networks.
3. Tap the required Wi-Fi network to connect to it. If a password has been set for the Wi-Fi network, enter the password in the displayed dialog box and tap Connect.

After you successfully connect to the Wi-Fi network, the Wi-Fi connection icon is displayed on the status bar.

##### Add a Wi-Fi network

Some Wi-Fi networks do not broadcast SSIDs. Therefore, you need to add such Wi-Fi network when you are to use it.

1. Go to Settings > WIRELESS & NETWORKS and tap  in the upper right corner.
2. Set Network SSID and Security.
3. Tap Save.


##### Delete Wi-Fi networks

The system automatically saves connected and added Wi-Fi networks and connects the tablet to one of them when the tablet is used in the corresponding network coverage. Perform the following steps to delete a Wi-Fi network:

1. Go to Settings > WIRELESS & NETWORKS and tap a connected Wi-Fi network to open it.
2. Tap Forget in the displayed dialog box.

The connection information is deleted and you need to set information to connect to it next time.

### **Set a Wi-Fi network**

1. Go to Settings > WIRELESS & NETWORKS, tap , and tap Advanced.
2. Select Network notification.

The system automatically notifies you of open Wi-Fi networks nearby.

3. Tap Keep Wi-Fi on during sleep.

In the dialog box that appears, tap Always, Only when plugged in, or Never to set whether to keep Wi-Fi connected when the tablet is in sleep mode and when to keep Wi-Fi connected. If you tap Always, the Wi-Fi network is always connected even when the tablet is in sleep mode.

## **Bluetooth**

Go to Settings > WIRELESS & NETWORKS and tap ON/OFF on the right to disable or enable the Bluetooth service.

After you successfully enable the Bluetooth service, the Bluetooth connection icon is displayed on the status bar. By using the Bluetooth service, files can be transferred between devices whose Bluetooth service is enabled.

## **Mobile networks**

1. Use a 3G USB Dongle to connect to the tablet when the tablet is on. The tablet automatically identifies the 3G mobile device.
2. Use the tablet after the 3G signaling icon is displayed on the status bar.

**Tips:** Go to Settings > WIRELESS & NETWORKS and tap More, and tap Support 3G Network to

view the 3G card models that this tablet supports.

### **View 3G data traffic**

Go to Settings > WIRELESS & NETWORKS and tap Data usage. You can view details about the 3G card traffic.

## **Sound**

Set the volume, notification alert, touch tone, and lock tone.

## **Display**

**Display:** Set items including the brightness, wallpaper, sleep, daydream, font size, accelerometer coordinate system, and screen adaption.

## **Storage**

View system storage status. You can select to format the SD card. After you insert an SD card or USB storage device, you can select to unmount or mount the SD card or USB storage device.

## **Battery**

View battery power and usage.

## **Apps**

View the downloaded, running, and all applications. You can uninstall or move applications, or clear cache for applications. You are advised to move downloaded applications to the SD card.

## **Users**

You can set the owner nickname and information.

## Location access

This item is available only in an environment with a network connected. You can set whether you allow applications to use the GPS service or Google location service to access your location information.

## Security

- Screen Security

**Screen lock:** By default, the screen is unlocked in slide mode; however, you can set to the pattern or password mode.

**Owner info:** You can set owner information to be displayed on the locked screen.

- Encryption

After you encrypt the tablet, you must enter a numeric PIN or password to decrypt the tablet each time you power it on.

- Passwords

You can make passwords visible.

- Device Administration

**Device administrators:** View or deactivate device administrators.

**Unknown sources:** After you select this item, applications from non-Google electronic store can be installed.

**Verify apps:** After you select this item, applications to be installed are verified. Applications that may cause harm are not allowed to be installed, or a warning is displayed before you install such applications.

- Credential Storage

**Trusted credentials:** Display trusted CA certificates.

**Install from SD card:** Install certificates from the SD card.

**Clear credentials:** Remove all certificates.

## Language & input


- Language & input

**Language:** Set the system language.

**Spell checker:** Set the spelling checker.

**Personal dictionary:** Add words to the user dictionary.

- Keyboard & Input Methods

Select an input method from the system built-in or third-party input methods. After selecting an input method, tap  on the right to switch to it or tap Default to set it as the default input method.

- Speech

You can set voice search and text-to-speech (TTS) output.

- Mouse/Track Pad

Set the pointer speed.

## Backup & reset

- Backup & Restore

**Back up my data:** Back up application data, Wi-Fi passwords, and other settings to Google servers.

- Personal Data

**Factory data reset:** You can tap this item to restore the tablet to factory settings. If you select Erase SD card, all data in the memory device in the tablet is deleted.

## Accounts

**Add account:** Add a Google, company, or email account.

## Date & time

- **Automatic date & time:** indicates whether the tablet automatically obtains time from the

Internet after it is connected to a network.

- **Automatic time zone:** indicates whether the tablet automatically obtains a time zone from the Internet after it is connected to a network.
- **Set date:** After deselecting Automatic date & time, you can manually set the date.
- **Set time:** After deselecting Automatic date & time, you can manually set the time.
- **Select time zone:** After deselecting Automatic time zone, you can manually select a time zone.
- **Use 24-hour format:** When you select this item, the 24-hour format is used. When you deselect this item, the 12-hour format is used.
- **Choose date format:** You can select a date display format.

## Accessibility

Set services and system items such as magnification gestures, large text, auto-rotate screen, quick boot mode, and high speed mode.

## Developer options

**USB debugging:** By default, this item is deselected. This function is enabled only when the tablet communicates with third-party software installed on a PC.

**NOTE:** Disable this function when the tablet properly connects to a PC for charging or data copying.

## About tablet

View information about this tablet.

## 5 Software Installation and Uninstallation

### Installation

Download or copy the required applications to the local storage device or storage card, open File Manager, select a third-party application file, and tap Install.

### Uninstallation






Go to Settings > Apps, select an application, and tap Uninstall.

## 6 Common Applications

### Music Player

1. On the APPS page, tap the Play Music icon to display the playlist.
2. Tap the song to be played. The music playing page is displayed.

The following table describes the icons on the music playing page.

Operation	Icon
Play/Pause	
Previous/Next	
Playlist	
Repeat/Shuffle	
Volume	

## Video Player


 






1. On the APPS page, tap the Gallery icon to display the playlist.
2. Tap the video to be played.

When a video is played, you can touch the screen to display the play control bar.

**Tips:** You can select any installed video player to play videos.

## Camera


Tap the Camera icon to open the photo taking and video recording page. The common functions are described as follows:


 
- **Photo taking:** Tap . The photo taken is automatically saved.
- **Front/Rear camera switch:** Tap , and tap  to switch between the front and rear camera.
- **Photo taking/Video recording/Panorama:** Tap , tap  to record videos, tap  to take photos, and tap  to capture panoramic pictures.
- **Video recording:** Tap  to start or stop recording. The video recorded is automatically saved.

## Gallery

Tap the Gallery icon to open the gallery and tap a picture.

When viewing a picture, you can perform the following operations:

- Swipe left or right to view the previous or next picture.
- Tap  to perform operations such as deleting, playing a slideshow, rotating the picture left, rotating the picture right, and cropping the picture.

- Tap  to delete the picture.
- Tap  to share the picture through Picasa or Gmail.


## File Manager

Open the File Manager application. You can manage the internal storage device, storage card, and external mobile storage devices. In the file manager, you can copy, move, rename, delete, or cut files.

## Email

- **Set email:** Tap the Email icon and follow the wizard to set email information. You can add external POP3 or IMAP email accounts provided by common email service providers such as Sina, Sohu, Gmail, and QQ. To manually configure email information, contact your email service provider to obtain correct account information. For example, you need to understand POP3/IMAP and corresponding server settings.
- **Receive and send emails:** After successfully set the email information, you can receive and send emails.

## Browser

- **Open a webpage:** Open a browser, tap the address field, enter the URL, and tap the confirmation key (for example, the Go key) on the keyboard. The actual confirmation key varies depending on input method.
- **View a webpage:** Slide your finger on the screen to browse or view other webpages.
- **Enlarge/Reduce a webpage:** Browse a webpage, double-tap to zoom in or zoom out, or spread two fingers apart to zoom in and pinch the two fingers together to zoom out.
- **More operations:** Tap  when you view a webpage. You can tap the options to perform corresponding operations.

## GPS Application

The tablet has a built-in Global Positioning System (GPS) module that allows users to use the positioning and navigation functions through the pre-installed Local, Navigation, and Maps applications or other installed applications.

In an outdoor environment or an environment where a large area of sky is visible:



- Open the Local application.

The system automatically locates your position and you can search for restaurants, cafes, bars, and attractions nearby.

- Open the Navigation application.


The system automatically locates your position and you can enter a destination by speech or text to start using the navigation function.

- Open the Maps application.

You can tap  to locate your position, and tap  to enter a start point and an end point to start the navigation.

### NOTE

- If you need to use the positioning and navigation functions without a network connected, you must connect to a network to download the map of the required areas before disconnect the network. Otherwise, the positioning and navigation functions cannot be used.

- Tap the menu  and choose Make available offline.

The system displays a red rectangle to prompt you to choose the area map to be downloaded. You can enlarge or shrink the area of the map to be downloaded. After the map is downloaded, you can properly use the positioning and navigation functions without a network connected.

## 7 FAQ

### 1. What can I do when the tablet does not respond or cannot be properly started?

- a) Poke the Reset button and press the Power button.

- b) Check whether the tablet fails to be turned on due to insufficient power. Turn on the tablet after charging it for more than 10 minutes.
- c) Contact a professional to upgrade the system.

**2. Why is the standby duration of the tablet too short sometimes?**

- a) The standby duration depends on factors including the brightness, network operations, and operation frequencies. You are advised to reduce the brightness and disable networks when they are not used.
- b) The running of some third-party software may stop the tablet from entering the sleep mode, which shortens the standby duration.

**3. Why does the system respond slowly sometimes?**

- a) Too many third-party applications are installed, which occupies large memory and causes the slow response of the tablet. You are advised to uninstall unnecessary software.
- b) Back up data and restore the tablet to factory settings.

**4. Why errors occur when I start an installed third-party application?**

The Android operating system cannot compatible with some third-party software due to hardware and software restrictions. You are advised to download third-party software that is compatible with the tablet software and hardware.

## 8 Safety and Cleaning

### Tablet Carrying

Do not drop your tablet to the floor. You can use leather cases sold by other manufacturers to protect your tablet from scratching.

**WARNING:** Your tablet includes damageable parts and a rechargeable battery. Do not drop, twist, or crush the tablet, to prevent damage.

## Reducing Electric Shock or Tablet Damage Risks

Keep the tablet from water and moisture while using it. Keep your tablet away from liquid sources such as rain, drinks, or washing sinks. Do not drop food or liquid to the tablet. Clean the tablet when it comes in contact with anything that may cause stains. Turn off the tablet before cleaning it. If faults occur due to anything splashed to the tablet, contact the local dealer.

**WARNING:** The electronic device may cause harms to humans if it is not properly used. Children must operate the tablet under adult supervision. Keep children from touching internal device parts or any cables.

## Properly Using the Data Cable and Power Adapter

- Use the power adapter provided with the tablet. Adapters for other electronic devices may look similar; however, they may pose negative impact on or even damage your tablet.
- Do not disassemble or modify the power adapter. Do not use the power adapter when it is damaged. Otherwise, electric shock or fire may be caused.
- The power adapter gives off heat when it is used. Keep the surrounding of the power adapter ventilated, and put the power adapter away after the charging is complete. Place the power adapter on a hard and flat surface, if possible, to allow the power adapter to well give off heat.
- Do not touch the power adapter with wet hands. If the power adapter comes in contact with water or other liquid, cut off the power immediately.
- Do not short-circuit the power adapter. Do not shake or mechanically vibrate the power adapter. Do not expose the power adapter to direct sunlight. Do not use the power adapter in high humidity places such as the bath room. Do not expose the power adapter to rain or moisture.
- Do not use the power adapter near electrical appliances such as TV set and radio set.
- Hold the power adapter instead of pulling the power cord when pulling the plug. Otherwise, the power cord may be damaged.
- Place the power adapter in a place out of children's reach, to prevent safety risks.

- Ensure that the data cable matches the micro USB port and that the data cable is connected to the micro USB port at the correct end.

## Keeping the Tablet Exterior Clean

Ensure that the tablet is turned off. Use a soft and lint-free cloth. Keep openings from moisture. Do not use cleaning products such as spray, solvents, alcohol, or abrasives.

## Keeping the Tablet in a Safe Temperature Range

Use the tablet in a temperature between 0°C and 40°C. The use duration of the tablet may be shortened when it is used in a low temperature. Do not leave your tablet in a car. The temperature inside a parked car may exceed the safe temperature range.

The tablet gives off heat at the rear when it is used or charged. This is normal. The rear of the tablet enclosure transfers heat from the device inside to external cool air to give off heat.

The tablet has a built-in lithium battery. If not properly handled, the battery may cause fire or overheating. Do not decompose or burn the battery when the temperature exceeds 100°C. Contact the after-sale service center to replace the battery for you.

## Storing the Tablet

Place the tablet in normal temperature (a temperature between 20°C to 25°C is recommended). Take the following measures to maintain battery life:

- Use the tablet to discharge it before storing it.
- Turn off the tablet and charge it once about every six months.

## Preventing Hearing Loss

Set the volume to a proper level. If tinnitus is caused, turn down the volume or stop using the tablet.

**WARNING:** When you use a headphone, listening to sounds at high volumes may damage your hearing permanently. After listening to music for a period, you get used to higher volumes which

sound simple but may damage your hearing. If tinnitus is caused or sounds are inaudible, stop listening and check your hearings.

## **Warning About High-Risk Activities**

The tablet is not applicable in environments with nuclear devices, airplane navigation, or communication systems or other special scenarios. Follow related rules to ensure safe use.